

# **V3 Diamond Grill Replacement Installation**



**Rev A  
11/4/2008**


***CARVIN***  
**carvinservice.com**

## STEP 1



Set the amp on its back, make sure to remove the AC Cord, or Speaker Cable before you tilt it back.

## STEP 2

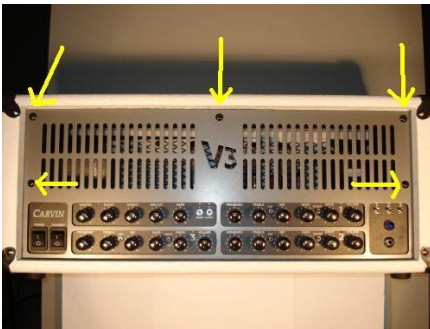

Take out the 5 screws to remove the V3 grill from the cabinet. In the picture to the left it's indicate in yellow which screws to take out.



Only the 5 screws are holding the grill to the cabinet.

## STEP 3



When the 5 screws are removed it's very easy to remove the original front grill. Take your time remove the front grill you can damage the Vinyl if you are not careful.

## STEP 4



Make sure you wipe clean the V3 Diamond grill before installing it, if it's dirty the dirty will get stuck to the Vinyl.

